

USE & MAINTENANCE MANUAL

STEAMER COOKER ELECTRIC VERSION



1.0 Legend :

- 1.1 Inside the package
- 1.2 How to assemble the product
- 1.3 Correct working of product
- 1.4 Correct maintenance of product
- 1.5 Guarantee
- 1.6 Details

Thank you so much for buying a **Rollycarp** product , below you can find all information necessary for the correct functioning of the product. For any other information or technical support contact

1.1 Inside the package

STEAMER COOKER VERSION BASKET (5 KG) :

At the inside of the package you find all material in list , if missing material , contact us.

- N. 1 Cooker Basket Elettric case (dim.about 38x38 H=42 cm)
- N. 2 Lateral Handles installed
- N. 1 Cover with Handles installed
- N. 1 Thermostat 0/120°C on cover installed
- N. 2 Metal support spacers for height water
- N. 1 Electric Case with safety evident with yellow/green cable fixed
- N. 1 Power Cable (lenght changing min. 1 meter max 3 meter)with European Plug Schuko (Power Supply 230v)
- N. 1 Electrical resistance 2000—2500W installed inside the Cooker
- N. 1 Caps installed in the botton for exit water
- N. 1 Dice Brass 1" for install a Thermostat on the cover

STEAMER COOKER VERSION SMALL (12 KG) :

At the inside of the package you find all material in list , if missing material , contact us.

- N. 1 Cooker Small Elettric case (dim.about 63x44 H=75 cm)
- N. 4 legs of support (not installed)
- N. 1 Cover with Handles installed
- N. 1 Thermostat 0/120°C (to install on the cover hole)
- N. 2 Metal support spacers for height water
- N. 1 Electric Case with safety evident with yellow/green cable fixed

- N. 1 Power Cable (length changing min. 1 meter max 3 meter) with European Plug Schuko (Power Supply 230v)
- N. 1 Electrical resistance 2000 W installed inside the Cooker
- N. 1 Caps installed in the bottom for exit water
- N. 8 Screws Metal TCEI M6x12 mm (to install 4 legs)
- N. 8 Dice Metal Blind M6 (to install 4 legs)
- N. 1 Dice Brass 1" for install a Thermostat on the cover

1.2 How to assemble the product

STEAMER COOKER VERSION BASKET (5 KG) :

Position the cover on the steamer Cooker basket. In this product you don't assemble never. You must only insert a plug and work . For Stop remove a plug . Take the thermostat supplied and Dice brass supplied and install in the hole on the cover, Dice brass internal

STEAMER COOKER VERSION SMALL (12 KG) :

In this product you must install the 4 legs supplied on the 4 lateral plate and the Thermostat supplied on the hole cover. Take a 8 Screws TCEI M6x12 mm and 8 Dice Blind M6 and proceed to the assembly as shown in photos (FOTO 1.1).

Take the thermostat supplied and Dice brass supplied and install in the hole on the cover, Dice brass internal



1.3 Correct working of product

For the correct working of product Rollycarp Steamer Cooker Elettric you must to do attention at these **IMPORTANT ADVICE**

- **NEVER** start work without a water
- The resistance **MUST ALWAYS** be surrounded in water
- Never remove a plug before shutdown product for the ON / OFF Switch
- Not wet the electric components
- At the end of use, **ALWAYS** allow the heating element to **COOL** completely for at least 2 hours **IMMERSED IN WATER**
- We recommend a maximum continuous use for not more than 3 hours, then turn off and let stand for 30 minutes before using the product.

1.4 Correct maintenance of product

For maintenance and care of your product will ensure the quality of the same over time. Here below you can find how to cure the product:

- Finish work let out water for the bottom caps
- Dry with care the parts after use
- Not use abrasive or corrosive cleaning products
- Not work on the electrical resistance never
- Dry with care a thermostat after at finish work

1.5 Guarantee

The product Rollycarp has guarantee for 24 month starting date on the Invoice

The guarantee doesn't cover damages due to current overloads due to which the product should be linked or caused by other equipment, systems or components occasioned by improper access or unauthorized use. The materials subject to wear and tear (including resistance or the connected mechanical parts) are specifically excluded from this warranty, unless you wear or damage isn't attributable to a defect in material or factory Rollycarp.

Any breaking of seals or tampering of the product will void the warranty. The warranty does not cover damage due to NOT correct operation by the operator (See paragraph 1.3 of this manual)

In case of out of warranty service the transport costs by the buyer as well as the costs of repair, testing, upgrade product.

1.6 Details

Rollycarp disclaims any responsibility for damage to other products or people due to voltage overload or power failure during use.

For any further information about this booklet, contact us

WWW.ROLLYCARP.IT

**ROLLYCARP SNC DI OLIVA MARCO & C
VIA MALASPINA 1P**

41032 CAVEZZO MODENA ITALY

ITALIA / VAT NUMBER : IT03422020366

Tel.: +39 339 8499285 MARCO : ITA / ENG

Tel.: +39 338 7688626 ROBERTO : ITA / FRA

E-mail: ordini@rollycarp.it